

Operating Instructions for Skydancer/ Skytube



Dirk Joachimsmeier

Tel: 02 91 90 24 691

Fax: 02 91 90 24 799

Mobil: 01 70 33 00 300

dirk.joachimsmeier@airlebniswelt.com

airlebniswelt GbR

Schützenstraße 50 • 59872 Meschede

Tel: 02 91 90 24 691 • Fax: 02 91 90 24 799

info@airlebniswelt.com

www.airlebniswelt.com

Geschäftsführer:

Dominik Stracke • Dirk Joachimsmeier

Steuernr: 334 5701 0624 • FA Meschede

Sparkasse Meschede

Kto: 466 49

BLZ 464 510 12

Please read these instructions carefully before setting up the display.

These instructions are part of the sales contract between the customer and airlebniswelt GbR.

Description of function:


This inflatable is a moving display with a height of 6 to 18m, which is set up with one or two fans. The changing pressure in the inflatable creates the movement of the Skydancer/ Skytube.

Place of installation:

The area of operation needs to be a horizontal place. Remove this area from dirt and light items, which can be absorbed by the fan and destroy the fan. These items can also change the color of the inflatable. To avoid damages and soiling of the inflatable, make sure that in the radius (Hmax) of the Skydancer are no power supply lines, pylons, chimneys, guttering, traffic signs, as well as oily, sharp edged or dirty objects.

Installation:

Set up the fan on the cleaned up, horizontal ground. Check the grill on both sides of the fan if it is fixed. Do a final visual check before you fasten the Velcro of the Skydancer to the fan. The top of the Skydancer can be enlarged due to wind strength.

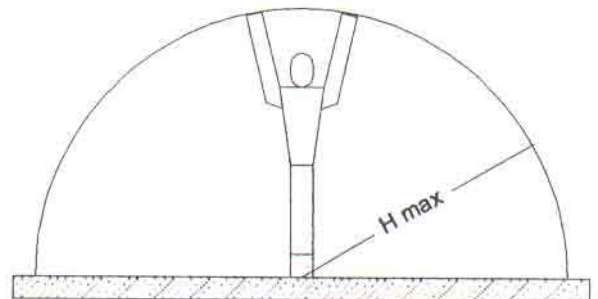

Before using the Skydancer close to the public, the following items should be taken into consideration:

1. Noise of the fan and the moving Skydancer
2. Risk of damage of the Skydancer

If the Skydancer is placed close to people, the Skydancer has to be supervised for minimizing the risk of damage. The buyer is responsible for the safety of the people around. The buyer is responsible for any permits necessary for the usage of the Skydancer.

Conditions of service:

Ideal results are in non-windy weather. The usage of the Skydancer is allowed when it is barely windy and lightly raining. The usage of the inflatable is not allowed if the conditions are rough (wind and rain).